


INSTALL STACKABLE BUTT PAD

- the length of the airsoft rifle can be extended by installing up to 3 stackable butt spacers. Each butt spacer is 1cm in length.
- Remove the butt pad by loosening the 2 locking screws.
- Choose the number of butt spacers you want to use and stack the butt spacers on the back of the stock.
- 8. Place the butt pad on top of the stack of butt spacers. Install and tighten the two locking screws.

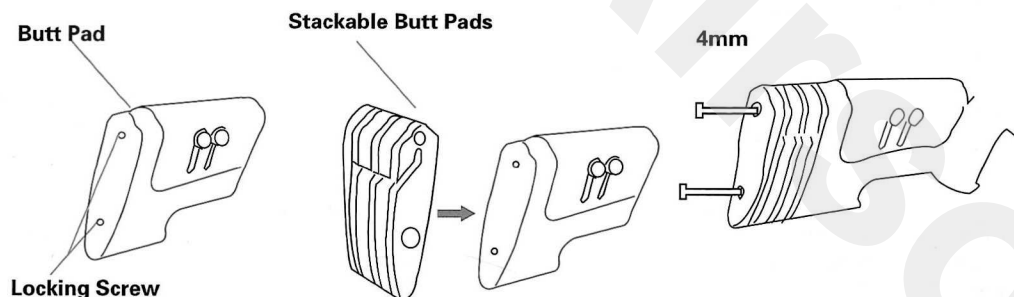

M62 SPRING POWER



SNIPER

USE 6mm BB BULLET

AGE: ABOVE 18



- Adjustable Hop Up System
- Velocity: 420FPS(0.2g)
Weight: 2280g
Mag Capacity: 27
Length: 1135mm

WARNING



DANGEROUS: Not a toy. Adult supervision required. Misuse or careless use may cause serious injury.



FOR AGES 18 YEARS AND UP- Must be 18 years of age or older to purchase; minors require parent or legal guardian supervision to operate.



EYE PROTECTION REQUIRED- Always wear eye protection to prevent injury. Do not fire at hard surface to prevent ricochet.



READ INSTRUCTION BEFORE USING : Follow safe handling procedures at all times. The purchaser and user should confirm to all laws governing the use and ownership of airguns.



DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC- It may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

中國制

Made In China




WARNING

Always read this manual before using


- Read through manual before shooting, paying special attention for safe operation.
- Thoroughly understand the warnings and cautions for safe operation.

CAUTION

- Always observe warnings and cautions strictly.
- Failing to do so may cause injury, accidents, or damage to the gun.

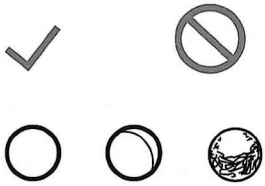


Always use precision BB Bullets for this airgun. Never use any used BB bullets.

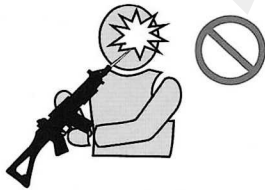


Do not look directly into the gun barrel to avoid accidental discharge of BB.




Never aim or shoot at people or animals as the target. Always set the selector on safe position except when you are ready to shoot a target.

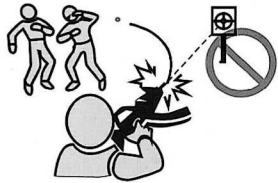


Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

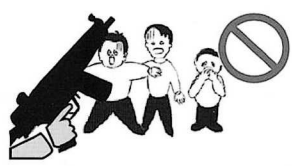

DO not brandish in public, do not alter the coloration and warnings - such an action is dangerous and may be a crime.

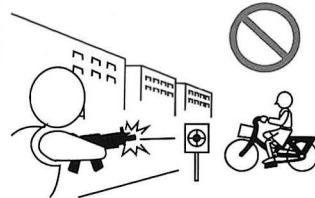


Select a safe place for operating the air gun, avoiding places where people and cars pass across or third persons are around.

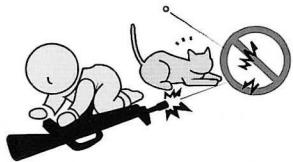

Always remove the any remaining BBs and the battery before storage. Store the airsoft gun in a case or bag out the reach of children to avoid accidents.





 Disassembling or modifying the gun may generate danger or adversely affect the performance.



There may still be BBs left in the airsoft gun even though the shell cartridge has been removed. Pulling the trigger carelessly is extremely dangerous. After removing the shell cartridge, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the airsoft gun.

COMPONENT CHART

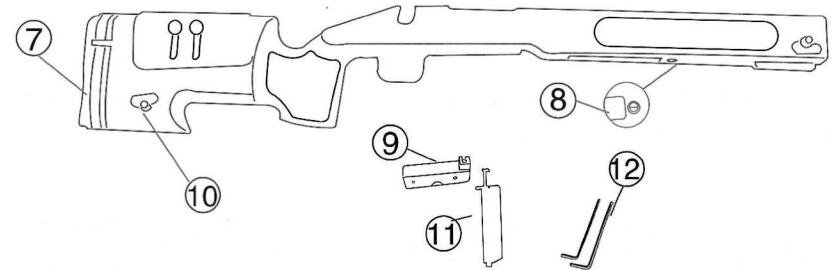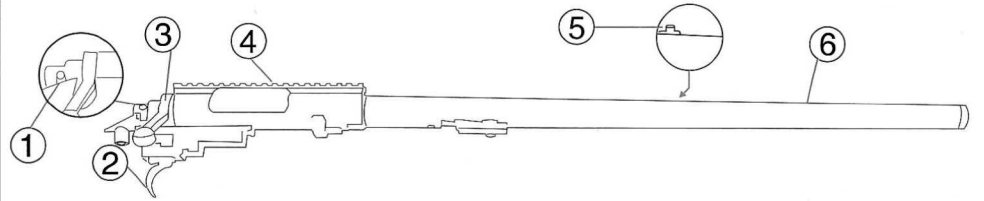


- ① Safety
- ② Trigger
- ③ Bolt
- ④ Rail Mount
- ⑤ Hop-up Adjustment
- ⑥ Barrel
- ⑦ Butt Stock
- ⑧ Magazine Release Button
- ⑨ Magazine
- ⑩ Sling Hook
- ⑪ Speedloader
- ⑫ Screw Set and Allen Wrench

Warning! Before you follow the assembly instruction, make sure to remove the magazine and set the Safety to the "SAFE" position.




ASSEMBLY

- Install Kit A (Receiver & Barrel) into Kit B (Stock) as in Fig 2.1, remember to tighten the screws to finish the assembly.

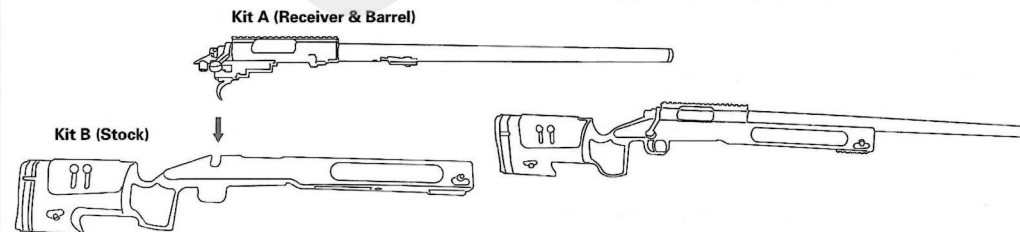

- This product is equipped with two wrench, as shown in figure. Use the large Allen wrench for screw A, Use the small Allen wrench for screw B、 C

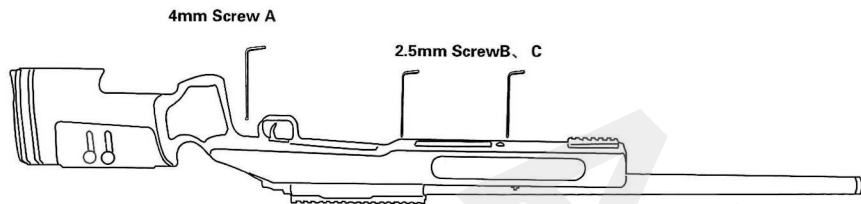

Warning! Don't confuse using screws, you must stop to tighten the screws when you feel heavy otherwise the gun may be damaged!

SETTING THE MAGAZINE

- Load Bullets into speedloader

① Open the Speed Loader Cap.
Insert 6mm Bullets into the Speed Loader.

② Locate and push the Rod Release Button to release the Spring Rod.




- Feed Bullets From Speedloader into Magazine

① Hold and disengaged the magazine by pressing the Magazine Release Button.

② Align The Tip of Speed Loader with the Bullets Drop of the magazine.

③ Push the spring Rod to load Bullets into the magazine. Repeat this process until the magazine is full.


④ Insert the loaded magazine back into the rifle.

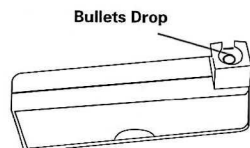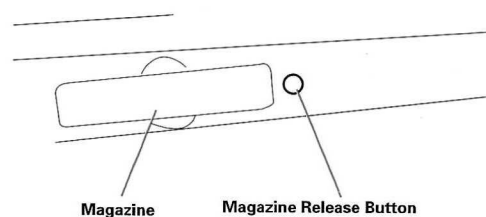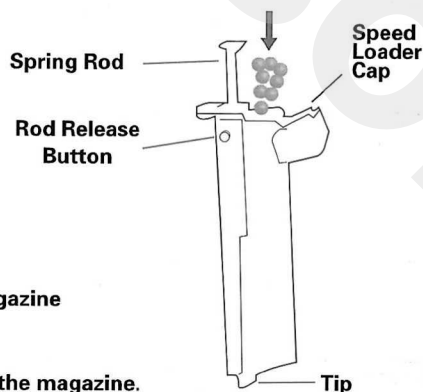


HOW TO SHOT

- Set Safety Lever to "F" position.

Safety

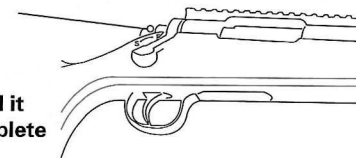

- Flip the cocking handle upward and pull it backward until it clicks, Then push it back into the original position to complete cocking in one continuous movement.

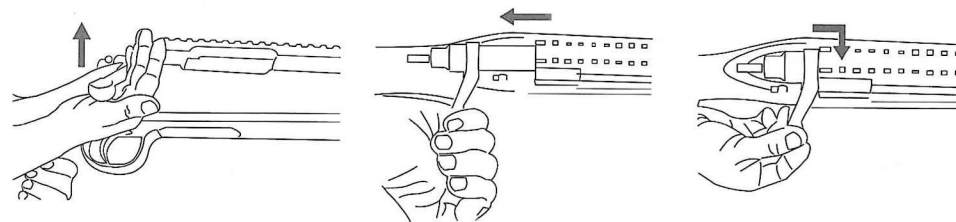

- Hold the gun firmly and rest the stock at a comfortable position.

- Aim the rifle at your target and pull the trigger to fire.

Adjustment HOP-UP



Warning! Activating the trigger carelessly is extremely dangerous. Never set the Safety on "F" position or put your finger on the trigger unless you are ready to shoot at a target.

- Locate the Hop-Up switch at the left side of the foregrip.

- Slide the Hop-Up adjustment switch to a desired position.


- After you finish reading the manual and have fired a few shots, watch the trajectory. Adjust the Hop Up as required to raise or lower the BB trajectory.

- The best positing is where the bullets fly horizontally, and the longest flying distance is obtained.

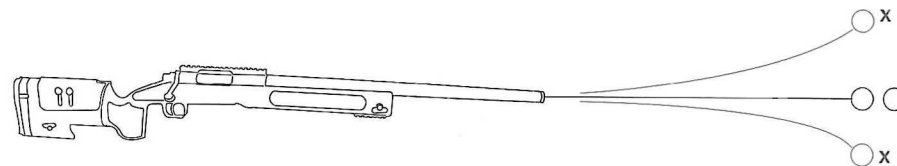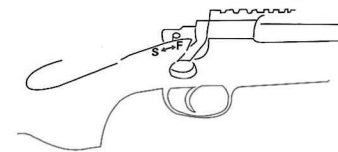


MOUNTING


- Should the red dot become dim or does not light at all, you will need to replace the battery. To install new battery, turning the battery cover counter clockwise, and recover it in clockwise after replace the old battery with new one.

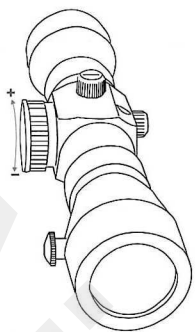



- When you mount this sight on a dovetail base gun, loosen the mounting screw, slide the sight onto the dovetail and tighten it at proper position.

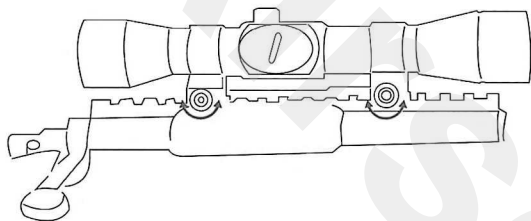

- Engage the sight by turning the switch. Turning the switch at 3 position will open the sight with the highest light (GS13 only), turning the switch at 2 position will open the sight with higher light, turning the switch at 1 position will open the sight with dark. Turning the switch at 0 position will close the power.

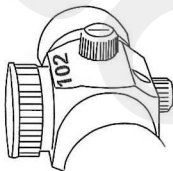

- Adjust the sight vertically by turning the elevation adjusting knob. Adjust the sight by turning the windage adjusting knob.

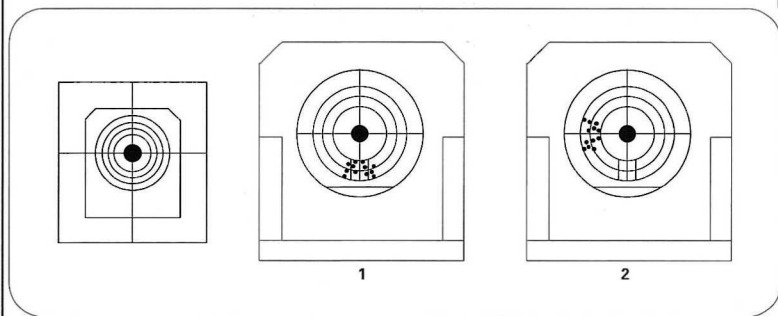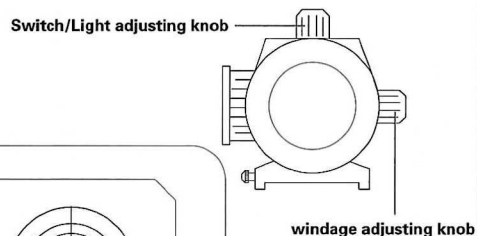


MAINTENANCE

- Maintenance when you are shooting but the BBs is came out slowly.

① Spray a cleaning patch with Lubricant oil with the cleaning patch on rod (rod may not be included with your sirsoft gun), insert it into barrel to clean.

② To complete the cleaning, use the cleaning rod (with cotton) as shown below. To remove excess oil.

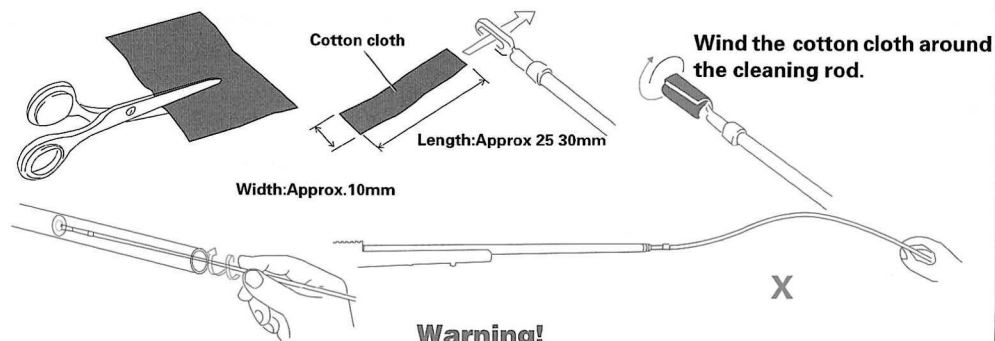

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.

Warning!


Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF)

Inserting the rod will be difficult if you hold rod in the far end.

- Removing clogged bullets

Remove the magazine and return the hop up adjustment to the Normal position.

Insert the cleaning rod from the load edge into the barrel, make sure that the angled part of the cleaning rod faces down, and remove clogged bullets.

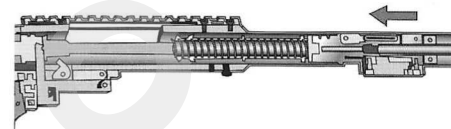

- Normal Maintenance
日常养护

Keep the rifle in clean condition. Regularly clean the barrel with soft cleaning rod.

Never use dirty, damaged or distorted bullets.