MICRO ACTIVE BRAKE II



Limitation: spring M160 (current 25A)

This device has to install expert. He must know how to disassemble airsoft gun and solder. Never use soldering gun!



www.jefftron.net 0

[|]660902^{||}437504

How connect device into the gun

- 1) Red wire lead to the battery positive (leads with black wire) Add fuse on this wire close to the battery (included in package)
- 2) Black wire lead to the battery negative (leads with red wire)
- 3) Red wire lead to the motor positive (leads with blue wires)
- 4) Black wire lead to the motor negative (leads with blue wires)
- **5)** Blue wire lead to the one trigger contact in the mechabox
- **6)** Blue wire lead to the another trigger contact in the mechabox

Be extra sure to connect wires appropriately, otherwise you could destroy the device, weapon or battery.

