MOSFET - V2

TO STOCK



Limitation: spring M160 (current 25A)

This device has to install expert. He must know how to disassemble airsoft gun and solder. Never use soldering gun!

www.jefftron.net 0 660902 4375



How connect device into the gun

- 1) Separate black wire connect to the motor negative (-M on board).
- **2)** Other black wire (**-B** on board) lead to the stock together with red wire, there are attached deanT connector and 30A fuse on them.
- 3) Free end of red wire connect to the motor positive.
- 4) Blue wire lead inside the gearbox together with other wires.

Verify if the contacts fit into the gearbox without any problems. Check right function trigger and cut-off lever with plunger. On the right half of the gearbox grind the pins pushing the wires. Be extra sure to connect the red and black wires appropriately, otherwise you should destroy the device, weapon or battery.

